

F|S

FABRICS-STORE.COM

Our linen is nothing short of addicting

LEMONS KITCHEN SET



A POP OF COLOR FOR THE KITCHEN

*Get creative with your narrow width, 100% Linen, IL085
Lemons fabric to make an apron, a pot holder, and a kitchen
towel.*

PATTERN DETAILS



YOU WILL NEED

- Matching threads
I used White Gutermann Sew-All thread
- 1/4 yard of Insulbrite insulative batting for the pot holder
- Pins and erasable marker
- Twill tape for hanging loop (optional)

FABRIC & YARDAGE

We used the following fabrics for this tutorial:

-3 yards of IL085 LEMONS SUPER LEMON MLT-11 - 100% Linen - Middle (6.8 oz/yd²), 20" wide

You may also like to use:

- IL085 NAVEL ORANGE - 100% Linen - Middle (6.8 oz/yd²), 20" wide
- IL084 Softened - 100% Linen - Heavy (7.1 oz/yd²), 19" wide. (This fabric is slightly narrower by 1" so please adjust the pattern as needed)

FINISHED ITEM MEASUREMENTS

The apron measures approximately 26.5" at its widest point and is 30" long. The hand towel measures 19" long x the width of fabric, and the pot holder measure 8.5" square.

SEWING INSTRUCTIONS

Be sure to read through the instructions before starting.

Pre-wash

Be sure to pre-wash your fabrics prior to sewing using our recommended washing instructions. You can always find them in our Help Center.

My fabric shrunk to 103" long from 108" after a warm gentle wash, dry on low and hot iron with steam.

SEWING INSTRUCTIONS


Step 1 - Apron

For your apron, cut 1 x 64" long piece. Set the remainder of fabric aside for now.



Step 2 - Apron

Cut away the gray patterned edge (approx 4.5" wide) and set aside, we'll use this to make our neck and waist tie later.

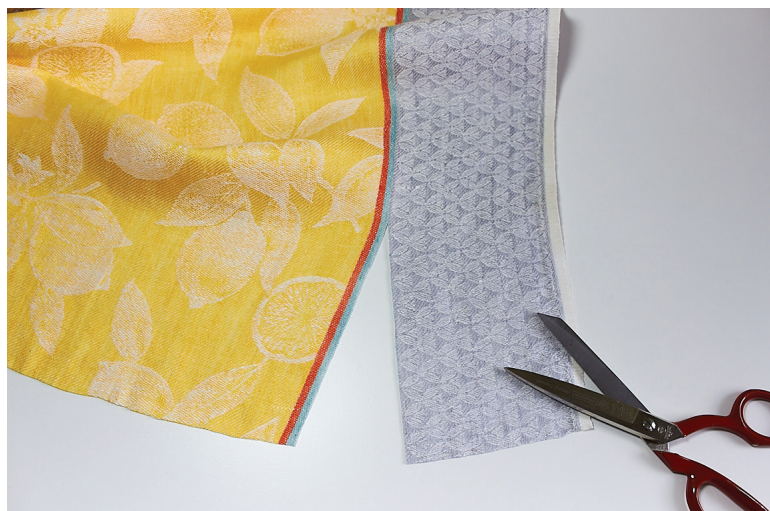

Step 3 - Apron

Cut the remainder of your apron piece in half, making 2 x 32" long pieces.

You will now have 3 pieces which will make up your apron: 2 apron body pieces measuring 32" long and one 64" grey strip which will make the neck and waist tie.



SEWING INSTRUCTIONS

Step 4 - Apron

Sew your two apron pieces together at the raw edges, with right sides together. Use the red-orange border as a guide for your seam, or use a 1/2" seam allowance.



Step 5 - Apron

To protect your seam, fold under the blue part (or 1/4") of your seam allowances. Press and sew down close to each of the folded edges. You have just done an open flat felled seam!



Step 6 - Apron

Hem the top and bottom of the apron by folding the raw edges over 1/2", twice. Sew down close to the inner fold to secure.



SEWING INSTRUCTIONS

Step 7 - Apron

Hem the sides of the apron by folding over the selvages and sewing down.



Step 8 - Apron

Lets shape the top of the apron. Measure 7" on either side of the top of the middle seam. Mark with an erasable fabric marker. Then measure 10" down each side of the apron from the top, mark the 10" point. Join the two points on either side of the apron with a diagonal line. Then cut them away.



Step 9 - Apron

Fold the diagonal edges over 3/8" then again 1". Sew down close to the inner fold. This will create a channel or 'casing' for our ties. Your apron body is done, set it aside and let's make the neck and waist tie.



SEWING INSTRUCTIONS

Step 10 - Apron

Get your 64" long gray offcut and cut it in half along the length evenly. Join the two strips together at one short end to make one long strip.

Sew using 3/8" seam allowance and press your seam allowance open.



Step 11 - Apron

To make the tie, fold your strip in half, matching the long edges, with the right sides together.

Sew a 1/4" seam along the long edges only. Pull inside out, and press flat. Tuck in the raw edges and sew the openings closed.



Step 12 - Apron

Thread the ends through the channels you made in your apron from top to bottom. Using a safety pin can make this easier.

You've made your apron with an adjustable neck and waist tie!



SEWING INSTRUCTIONS

Step 1 - Pot holder

For your pot holders cut 2 squares, 9"x9" of linen from the remaining fabric, and 2 squares (9"x9") of your insulbrite.



Step 2 - Pot holder

Lay 2 of your linen squares with right sides together. Lay two layers of the insulbrite on top. Pin all layers together.



Step 3 - Pot holder


If you would like to add a small hanging loop, twill tape works great, or make a tie from scraps of linen. Position it in between your two layers of linen, approximately 1" from a corner. Pin in place so it doesn't fall out.



SEWING INSTRUCTIONS


Step 4 - Pot holder

Sew around the outer perimeter using a ½" seam allowance, leaving a 2.5" to 3" opening on one edge.

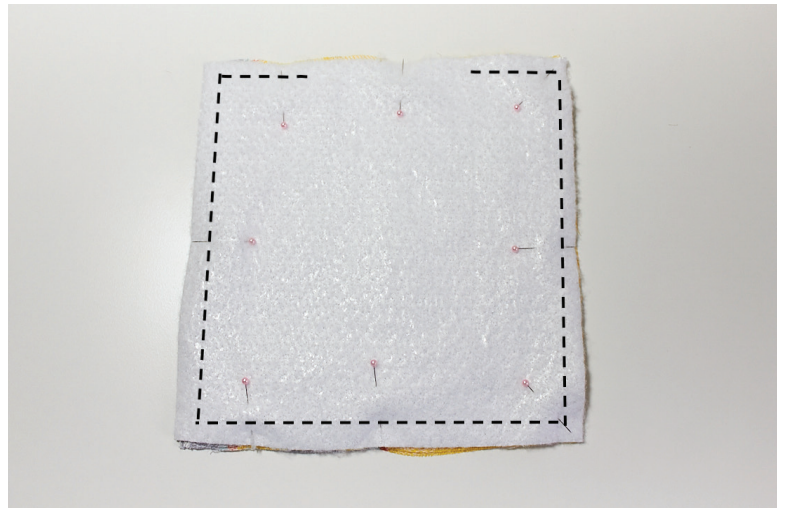

Step 5 - Pot holder

Cut away the corners being careful not to cut your stitching. Turn right side out, enclosing your two layers of insulbrite inside the two layers of linen.

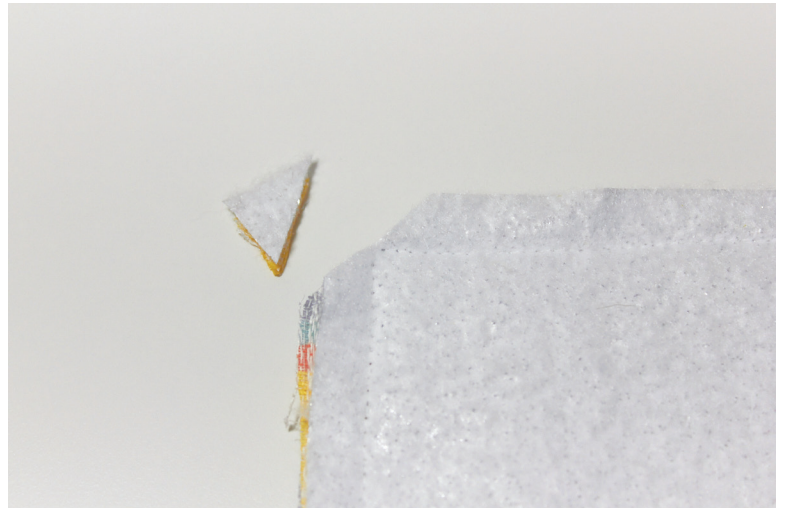

Step 6 - Pot holder

Sew the opening closed by hand using an invisible stitch or topstitch closed with your machine.



SEWING INSTRUCTIONS

Step 7 - Pot holder

Sew a border around your pot holder $\frac{3}{4}$ " to 1" from the edges or even get creative sewing a quilted design by hand or machine through all layers. I chose to sew a simple cross design.

Your pot holder is done!



Step 1 - Kitchen towel

With the remaining 30" of your fabric, you can make up the kitchen towel. Start by folding your 2 cut edges over $\frac{3}{8}$ " twice. Press.



Step 2 - Kitchen towel

Secure your hems by sewing close to inner folded edge.

You can leave your selvages as is or fold and hem if you prefer.



Your kitchen set is complete!

Thank you

*We work hard on making our patterns beautiful
enough to meet your standards.*

*If you feel like sharing praise or helpful criticism, please
send us your comments to ask@fabrics-store.com*